

CODING INSTRUCTION FOR TRANSMITTERS
MODELS: FMT-302,-304
USE WITH RXA-1 OR CRXA-1 RECEIVERS

Before a transmitter can be used to operate a receiver the transmitter's button must be "matched" to the receiver. Follow the simple procedure below to match the receiver to the transmitter.

STEP 1: Set the Channel Coding Switches 1 and 2 of the receiver in accordance with table 1.

Table 1

Transmitter FMT	1 st Button		2 nd Button		3 rd Button		4 th Button	
	RXA-1 (CRXA-1) Coding Switches Position		RXA-1 (CRXA-1) Coding Switches Position		RXA-1 (CRXA-1) Coding Switches Position		RXA-1 (CRXA-1) Coding Switches Position	
RXA-1 (CRXA-1) Switch Number	1	2	1	2	1	2	1	2
Match to FMT-302	ON	ON	ON	OFF	N/A	N/A	N/A	N/A
Match to FMT-304	ON	ON	ON	OFF	OFF	ON	OFF	OFF

STEP 2: Setting the transmitter's Security Coding Switches.

The transmitter's Security Coding Switches are located under the slide off battery cover. Using a pen or similar instrument, move the small switches so as to form a random looking pattern. For example, set switches 1, 2, 5, 7, 8 and 10 in the OFF position and 3, 4, 6 and 9 in the ON position. The selected pattern is encoded by the transmitter and forms the transmitter's code.

STEP 3: Match the receiver's Security Code to the transmitter's Security Code.

Using a pen or similar instrument, move the receiver's Security Coding Switches so that they must match the transmitter's Security Coding Switches. Use Table 2 for setting "matched" receiver's Security Coding Switch number. For example, set switches 12, 11, 8, 5, 6 and 3 in the OFF position and 10, 9, 7 and 4 in the ON position.

Table 2

Transmitter's FMT Security Coding Switch number		Receiver's Security Coding Switch number
12	matches	1
11	matches	2
10	matches	3
9	matches	4
8	matches	5
7	matches	6
6	matches	7
5	matches	8
4	matches	9
3	matches	10

NOTE: The receiver's Security Code established for the transmitter TXA-2 and TXA-4 mismatches a Security Code for the transmitters FMT-302 and FMT-304.

CODING INSTRUCTION FOR TRANSMITTERS
MODELS: FMT-302,-304
USE WITH RX-1 OR CRX-1 RECEIVERS

STEP 1 **Setting the transmitter's coding switches.**

The transmitter's coding switches are located under the slide off battery cover. Using a pen or similar instrument, move the small switches so as to form a random looking pattern. For example, set switches 1, 2, 5, 7, 8 and 10 in the OFF position and 3, 4, 6 and 9 in the ON position. The selected pattern is encoded by the transmitter and forms the transmitter's code.

STEP 2 **Matching the receiver to the transmitter's code.**

Follow the simple procedure below to match the receiver to the transmitter's code.

1. Press and hold the CODE SET button on the receiver.
2. Press the transmitter's button for approximately two seconds.
3. Pause for at least one second.
4. Press the transmitter's button again for approximately seconds.
5. Release the CODE SET button.
6. Test the transmitter for operation.

NOTE 1: The transmitter's code can be deleted from the receiver's memory by repeating the procedure above.

NOTE 2: The receiver can store up to fifteen different transmitter codes.

NOTE 3: To delete all transmitter codes in the receiver's memory, hold the CODE SET button down and turn the power on to the receiver, release the CODE SET button after approximately five seconds.