

# PANEL DOOR OPENER ( INVERTOR & CB14 )

| No | TEST PROCEDURE              |                      |                  |              |                  |            |
|----|-----------------------------|----------------------|------------------|--------------|------------------|------------|
|    | INVERTER                    |                      |                  | TEST SETTING |                  |            |
|    | Press button DSP/FUN<br>for |                      | Press buttons    |              |                  |            |
|    | Start                       | Finish               | ▽ Δ<br>Enter to, | Data/Entry   | ▽ Δ<br>Enter to, | Data/Entry |
| 1  | DSP/ FUN                    |                      |                  |              |                  | F00        |
| 2  |                             |                      | F01              | 5            | 0.1              | F01        |
| 3  |                             |                      | F02              | 5            | 0.1              | F02        |
| 4  |                             |                      | F03              | 0            | 0                | F03        |
| 5  |                             |                      | F04              | 0            | 0                | F04        |
| 6  |                             |                      | F05              | 4            | 1                | F05        |
| 7  |                             | <i>Speed Control</i> | F06              | 60           | 50               | F06        |
| 8  |                             |                      | F07              | 0            | 0                | F07        |
| 9  |                             |                      | F08              | 10           | 0                | F08        |
| 10 |                             |                      | F09              | 6            | 0                | F09        |
| 11 |                             |                      | F10              | 0            | 1                | F10        |
| 12 |                             |                      | F11              | 0            | 1                | F11        |
| 13 |                             |                      | F12              | 5            | 5**              | F12        |
| 14 |                             |                      | F13              | 0            | 0                | F13        |
| 15 |                             |                      | F14              | 0            | 1                | F14        |
| 16 |                             |                      | F15              | 0.5          | 0.5              | F15        |
| 17 |                             |                      | F16              | 1.5          | 1.5              | F16        |
| 18 |                             |                      | F17              | 8            | 8                | F17        |
| 19 |                             |                      | F18              | 100          | 100              | F18        |
| 20 |                             |                      | F19              | 2            | 2                | F19        |
| 21 |                             |                      | F20              | 5            | 5                | F20        |
| 22 |                             |                      | F21              | 3            | 3                | F21        |
| 23 |                             | DSP/ FUN             |                  |              |                  | 00         |

\*\* Notice: Enter 10 for TECO motors

*Rest  
Run  
Stop  
SL*

*14.7 - 50.7*